



Ref No	Part No	Description
1	HPO01T-01	Air Inlet
2	HPO01T-02	Inlet Washer
3	HPO01T-03	Valve Bdy
4	HPO01T-04	Throttle Valve
5	HPO01T-05	O-Ring
6	HPO01T-06	Spring
7	HPO01T-07	O-Ring
8	HPO01T-08	Valve Cap
9	HPO01T-09	Lever
10	HPO01T-10	Pin
11	HPO01T-11	Washer

Ref No	Part No	Description
12	HPO01T-12	Piston
13	HPO01T-13	Cylinder
13-1	HPO01T-13-1	Grip
14	HPO01T-14	Anvil
16B	HPO01T-16B	Needle Holder
17	HPO01T-17	Spring
18	HPO01T-18	Intermediate Tube
19	HPO01T-19	Hex Cap Screw (2)
20	HPO01T-20	Front Tube
21	HPO01T-21	Spring Washer (2)
22	HPO01T-22	Hex Wrench