

PLEASE READ AND FOLLOW ALL WARNINGS

Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.



Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



90 PSIG Maximum

This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

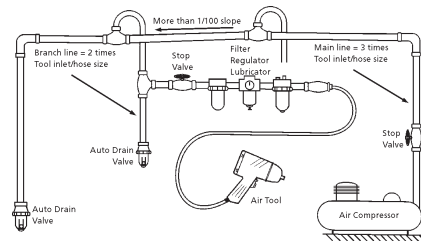

Description

Universal Tool 7" angle sander/grinder has a powerful 1 horsepower motor and is ideal for all sanding/grinder applications. Includes a side handle for increased operator control and rear exhaust.



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of CAGI B186.1-2009 Safety Code for Portable Air Tools, available from the following source: COMPRESSED AIR AND GAS INSTITUTE 1300 Sumner Avenue Cleveland, OH 44115-2851 Ph: 216-241-7333 www.cagi.org OR from Florida Pneumatic Manufacturing Corp. 851 Jupiter Park Lane Jupiter, FL 33458 561-744-9500 www.florida-pneumatic.com The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to CAGI B186.1-2009.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in CAGI B186.1-2009.

Tool Installation


Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjoined, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Specifications

Pad size	7"
Spindle size	5/8" -11
Free speed	4,500 RPM
Weight	4.4 lbs. UT8757-1 5.75 lbs.
Overall length	12"
Average air consumption	12 CFM
Air inlet	1/4" NPT
Recommended hose size	3/8" I.D.
Maximum air pressure	90PSI

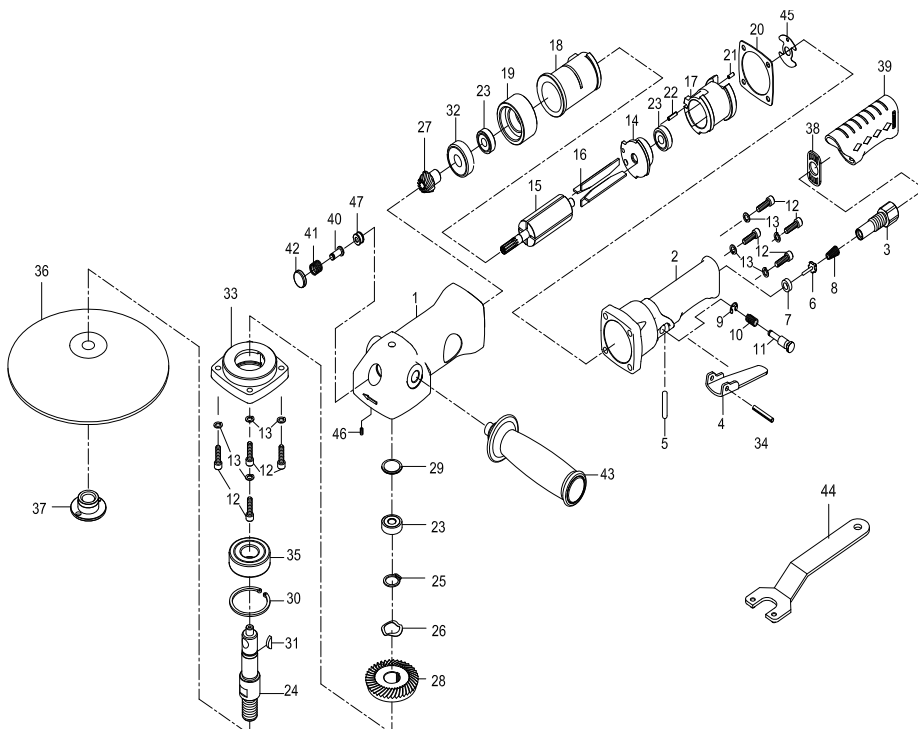

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	96N-666101	Motor Housing	25	9STW16	Retaining Ring
2	96N-666102	Valve Housing	26	9WW16	Spring Washer
3	96N-666103	Air Inlet	27	967-666127	Pinion Gear
4	95G-619704	Throttle Lever	28	967-666128	Bevel Gear
5	96N-666105	Valve Pin	29	96N-666111	Spacer
6	932-301210	Valve	30	9RTW40	Retaining Ring
7	932-301207	Valve Seat	31	961934	Key
8	932-301208	Spring	32	9080227	Ball Bearing
9	9SM62047	E-Ring	33	96N-666113	Spindle Cap
10	96N-666107	Spring	34	9SP04002500	Spring Pin
11	96N-666134	Safe Lever	35	906203Z	Ball Bearing
12	96N-666137	Screw (8)	36	8731247	Back Disc
13	940344	Washer (8)	37	8731075	Disc Nut
14	95D-619014	End Plate	38	96N-666123	Exhaust Diffuser
15	967-666115	Rotor	39	96N-666152	Rubber Grip
16	961916	Rotor Blade(4)	40	96N-666129	Shaft
17	95D-619024	Exhaust Deffector	41	96N-666108	Spring
18	95D-619018	Cylinder	42	96N-666130	Press Button
19	961919	Front End Plate	43	95D-619256	Handle
20	96N-666117	Gasket	44	9619554	Pin Wrench
21	963062	Spring Pin	45	95D-619007	Motor Gasket
22	940317-13	Spring Pin	46	972022	Set Screw
23	9030120	Ball Bearing(3)	47	96N-666139	Bushing
24	96N-666124	Spindle			
			* Not Shown * 5906 3/4" Wrench (UT8757-1) * 707111 Backup Plate Kit (UT8757-1) * UTA86155 7" Grinder Guard (UT8757-1)		

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material of workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.