



Ref No	Part No	Description
1	0308C001	Throttle Lever
2	0308C002	Spring Pin
3	0308C003	Housing
4	0308C004	Valve Bushing
5	0308C005	O-Ring
6	0308C006	Valve Stem
7	0308C007	O-Ring
8	0308C008	Valve Spring
9	0308C009	Air Controller
10	0308C010	O-Ring
11	0308C011	O-Ring
12	0308C012	Valve Screw
13	0308C013	Bearing
14	0308C014	End Plate
15	0308C015	Pin (2)
16	0308C016	Cylinder
17	0308C017	Rotor
18	0308C018	Blade (4)

Ref No	Part No	Description
19	0308C019	Collar
20	0308C020	Steel Plate
21	0308C021	Front Plate
22	0308C022	Bearing
24	0308C024	Lock Ring
25	0308C025	Disc Holder
26	For details of suitable discs consult supplier	
27	0308C027	Exhaust Sleeve
28	0308C028	O-Ring
29	0308C029	Air Inlet
30	0308C030	Wrench (11 mm)