



Ref No	Part No	Description
1	8841-01	Screw
2	8841-02	O-Ring
3	8841-03	O-Ring (2)
4	8841-04	Air Regulator
5	8841-05	Spring
6	8841-06	Valve Stem Bushing
7	8841-07	Valve Stem
8	8841-08	O-Ring
9	8841-09	Air Inlet
10	8841-10	Exhaust Sleeve
11	8841-11	O-Ring
12	8841-12	Spring Pin
13	8841-13	Lever
14	8841-14	Protecting Rubber
15	8841-15	Housing
16	8841-16	Bearing
17	8841-17	Rear Plate
18	8841-18	Pin (2)

Ref No	Part No	Description
19	8841-19	Rotor Blade (4)
20	8841-20	Rotor
21	8841-21	Cylinder
22	8841-22	Cone Muffler
23	8841-23	Front Plate
24	8841-24	Bearing
25	8841-25	Washer
26	8841-26	Gear Link
27	8841-27	Idler Gear (2)
28	8841-28	Idler Gear Pin (2)
29	8841-29	Bearing
30	8841-30	Gear Plate
31	8841-31	Bearing
32	8841-32	Clamp Nut
33	8841-33	Washer
34	H0019K	3/8" Jacob Keyless Chuck
35	8841-35	Needle Bearing (2)