



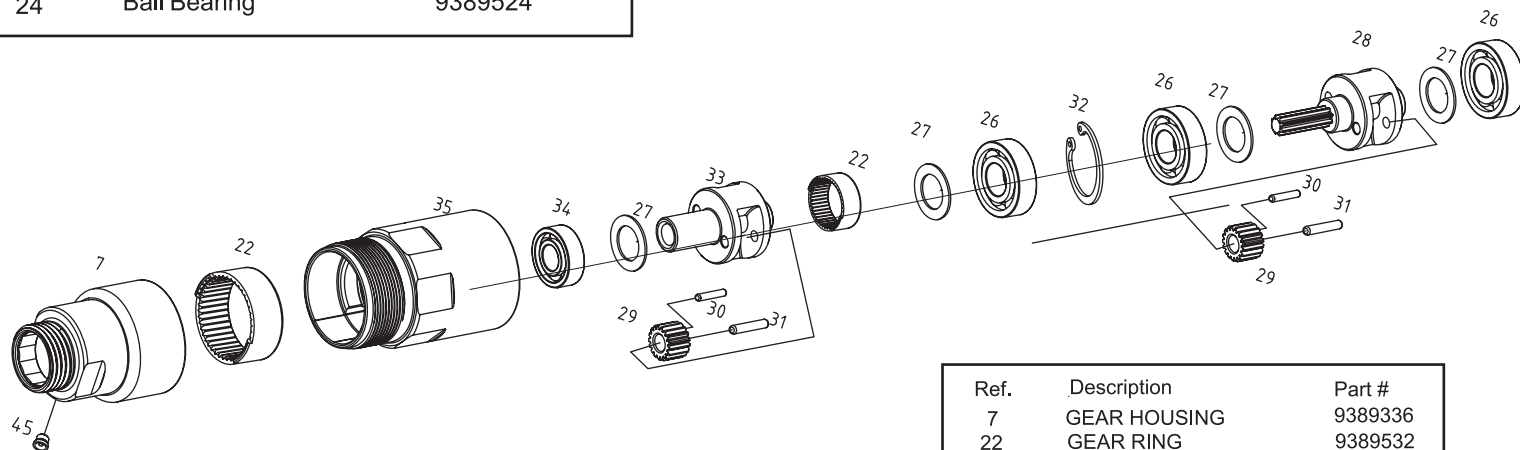

Universal Tool

UT8896RSP

Ref.	Description	Part #
1	Air Inlet	9389501
2	Deflector	9389502
2-1	Gasket	9389502-1
3	Spring	9389503
4	Valve	9328804VN
5	Valve Seat	9328835N
6	Spacer	9328825N
7	Sliencer	9389507
8	Housing	9389508
9	Dowel Pin	9389509
10	Valve Bushing	9389510
11	O-Ring	9389511
12	Reverse Valve Lever	9389512-M14
13	Valve Stem	9389513
13-1	O-Ring	9287617
13-2	Retainer	9389513-2
14	Triggerr	9389514
15	Spring Pin	9389515
16	Retainer	9389516
17	Rotor Blades (5)	9389517
18	Ball Bearing	9389518
19	Rear Plate	9389519
20	Rotor	9389620
21R	Cylinder /Reversible	9389521R
21A	Pin (2)	9389521A
22	O-Ring	9389522
23	Front Plate	9389523
24	Ball Bearing	9389524

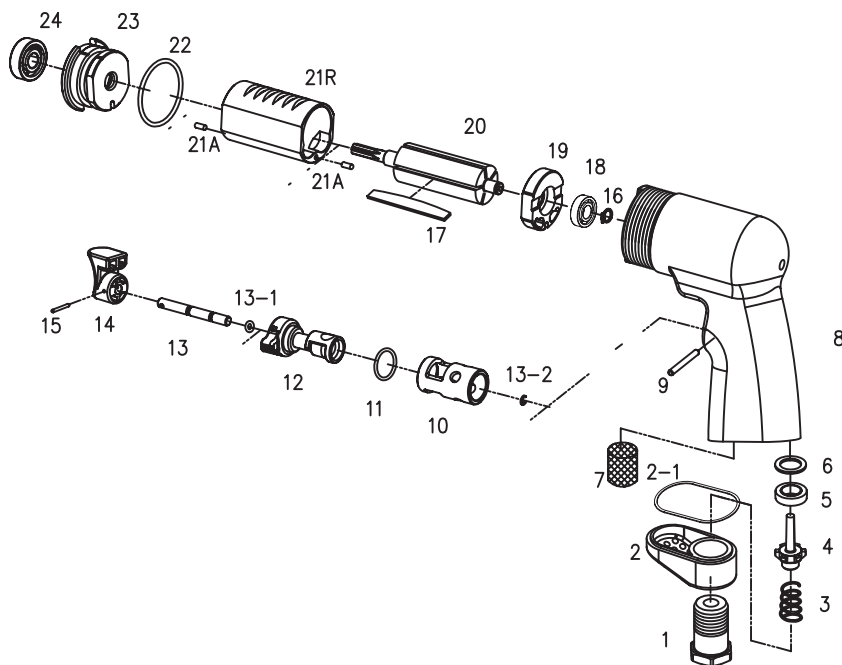

Ref.	Description	Part #
7	GEAR HOUSING	9389336
22	GEAR RING	9389532
26	BALL BEARING (3)	9389525
27	WASHER (4)	9389526
28	GEAR CAGE	9389627
29	PINION GEAR (4)	9389628
30	NEEDLES (36)	9389529
31	PIN (4)	9389530
32	RETAINER	9389634-1
33	GEAR CAGE	9389333
34	BALL BEARING	9389531
35	CLUTCH HOUSING	9389335
45	GREASE FITTING	9638047